


# ETG-CTL-MOT-CHSH4 Remote Control & Sensor Install Guide

## PRODUCT DESCRIPTION

Screen Display, Memory & Apply Function, Optional Scenes

\*PLEASE NOTE - Remote MUST be near light and turned on for initial setup

\*SEE WARNING BELOW

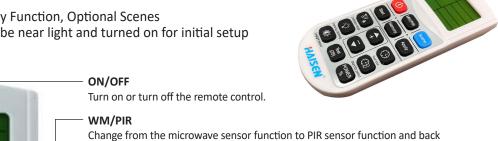

Press the button to change from the different scene options. Daylight threshold disabled.

Press the button before choosing parameters; Press it for 10s for RESET function.

### **MEMORY**

Press the button after choosing all the parameters to save them.

Press the button to deliver the saved settings to the other sensors directly.

The period of light on 100% brightness after moving objects leave the detection area.

### STAND-BY PERIOD

The period of light on low output before it shuts completely off. When it is preset as '--' the light always stays at low output even with no movement in the detection area.

### **POWER %**

Press the button to change the output power from 0% to 100%, it changes at 5% increments.

# TEST (2s)

Press the button for testing purposes after commissioning. Pressing this button, the sensor goes to test mode (hold time is only 2s)

### **DAYLIGHT THRESHOLD**

Setting for the ambient brightness; the sensor will work only when the ambient brightness is lower than the preset specific lux amount; when is preset as 'disable', the sensor works every time it detects motion, regardless of the ambient lux level.

# STAND-BY DIMMING LEVEL

The setting for low output during the stand-by period.

### **DETECTION RANGE**

The area in which movement will trigger the sensor. 100% Detection Area means strong sensitivity.

Increase or decrease the parameters.



### **WARNING:**

Remote must be out of line of sight of the light BEFORE turning it off. If too close, programming could be erased when remote is turned off!

Page 1 08/2021